


PA-PTT beim FT-897D über ACC-Buchse

Die ACC-Buchse ist standardmäßig auf TX-REQ und nicht auf TX-GND eingestellt. Um dies zu ändern muss der Jumper J27 auf der Oberseite der Platine, ca 5,5cm rechts von der ACC Buchse (da ist nur ein Jumper!) von Pos. 1+2 auf Pos. 2+3 umgesteckt werden. Dazu einfach den Gerätedeckel öffnen. Nehme einen 3.5mm Stereo Stecker: danach GND auf dem hinteren Anschluss und das TX-GND Signal auf dem mittleren Anschluss des 3,5mm ACC-Steckers anschließen. Fertig!

PA-PTT at the FT-897D via ACC socket

The ACC socket is put normally on TX-REQ and not on TX-GND. To change this you have to change only J27 on the top of the board, approx. 5.5 cm on the right from the socket ACC (there is only one jumper!) Open in addition simply the device lid. Change J27 from position 1+2 to position 2+3. Use a 3.5mm stereo connector: afterwards GND on the rear connection and the signal TX-GND on the middle connection 3.5 mm of ACC plug connect. Ready!

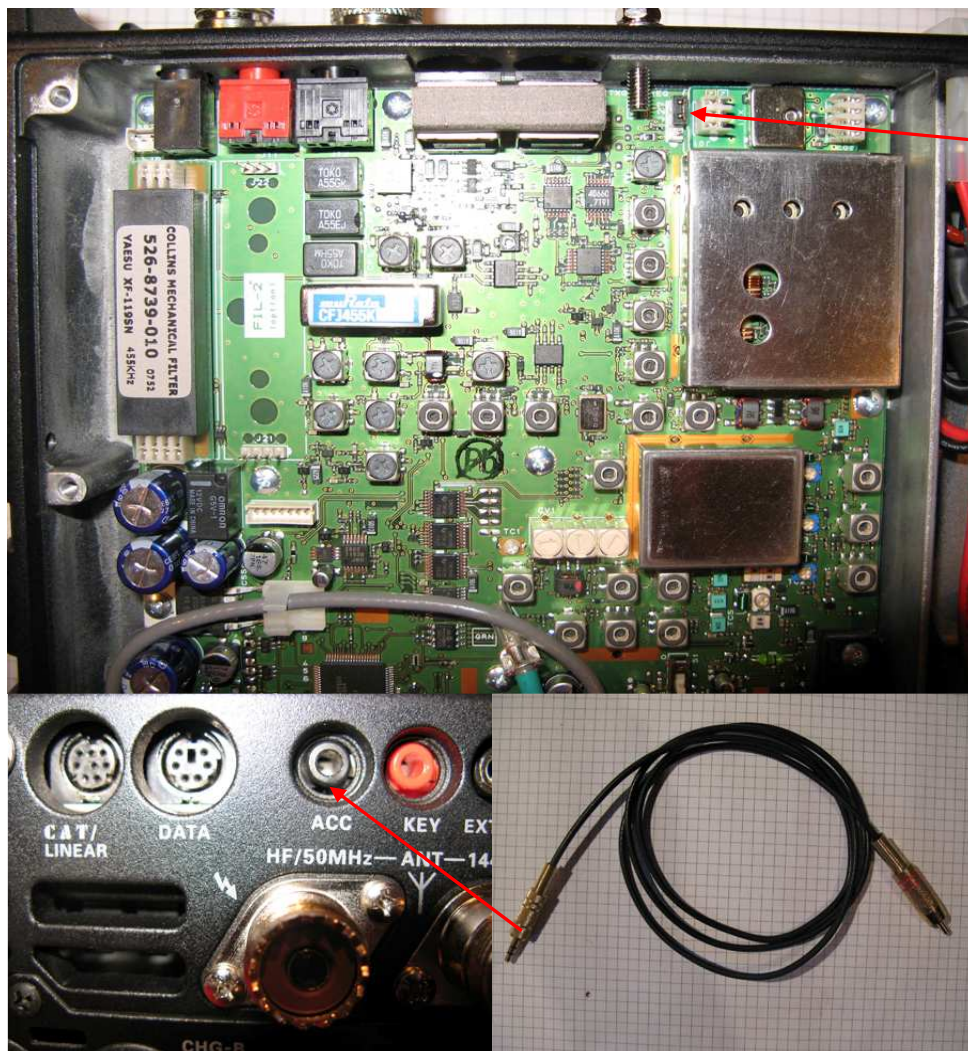

*All modification you make is on your own risk!
August 2009 DK5EW*